


说明书材质:157g双铜纸 d11*7cm

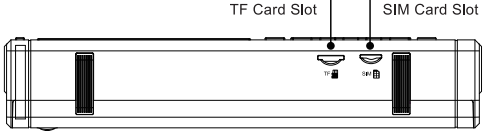

TF Card Slot SIM Card Slot

Local Media & USB Storage Function
The device supports TF cards up to 32 GB.

TF Card Playback

1.Insert a TF card into the TF Card slot on the bottom, then restart the device.

2.Short press the TF key on the top. Use the tuning knob and OK key to select files and play local media.

USB Drive Mode

With a TF card inserted and the device in standby mode, connect the device to a computer via a data cable.A prompt for Enable USB Drive will pop up. Short press the OK key to activate USB storage function.

SIM Card Slot

Power off the device before inserting the SIM card. After powering on, the device will use the data from the external SIM card. Go to the "Settings" menu and select "Sim card selection" to switch between using the built-in eSIM or the external SIM card.

10

Connecting to Wi-Fi


1.Short press the Settings key, select Wi-Fi, and short press OK.

2.Select the Wi-Fi switch, short press OK, and switch to ON.

3.Select available Wi-Fi List, then short press OK to access the network list.

4.Select the required Wi-Fi network and short press OK.

5.Enter the password via the on-screen virtual keyboard. Rotate the knob to select characters. After entering all characters, short press the OK key to confirm the password and connect.

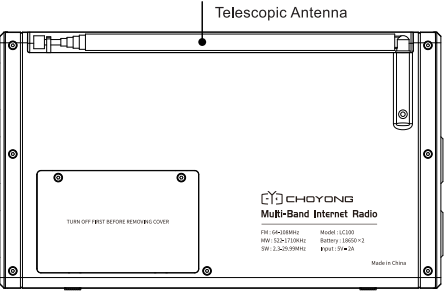

Telescopic Antenna

11

Charging Port

The device is equipped with a Type-C charging port, which supports reversible plugging for charging. You can also connect the device to a computer via the data cable to update the content on the TF card inside the device.

Telescopic Antenna Assisted MW Reception Function

The device has dedicated circuitry for the telescopic antenna to assist MW reception.

This function works only outdoors. Please use the internal magnetic bar antenna for indoor MW listening. Extend the telescopic antenna outdoors to improve MW reception.

12

About Manual Battery Replacement

The device uses two built-in 18650 batteries, which can be replaced by the user.Always power off the device prior to battery replacement: long press the red key at the upper left for 3 seconds to shut down.

Lithium Battery Safety Instructions

1. Replace only with the same type or equivalent type of lithium battery.

2. The battery (battery pack or battery assembly) must not be exposed to low temperatures, moisture, or environments such as sunlight, fire, or similar excessive heat; do not use the battery after it has been submerged in water.

3. Do not disassemble, strike, or crush the lithium battery. If the battery shows severe swelling, do not continue to use it.

Warm Reminder

This product is sold without a power charger. Please purchase a charger that has obtained CCC certification and complies with the 5V ~ 2A standard requirements.

13

Charging

When the battery icon displays (), it indicates that the battery is about to run out. Please charge the device promptly.

Use a USB data cable to connect a DC 5V mobile phone charger to the USB port on the side of the radio, and the polymer lithium battery inside the radio will begin charging. Note: This product is sold without a power charger. Please purchase a charger that has obtained CCC certification and meets the required standards.

Maintenance

1. Avoid severe impact, dropping, and water ingress.

2. Do not expose the device to direct sunlight, high temperatures, or humid environments. Do not use or store the device in temperatures below -5°C or above +45°C.

3. Do not place objects filled with liquid, such as vases, on the player to prevent dripping or splashing water on the product. Do not place exposed flame sources, such as lighted candles, on the player.

4. Avoid using liquids with corrosive chemical ingredients to wipe the surface of the player.

5. Do not disassemble the device or adjust internal component parameters on your own.

14

Trouble shooting:

Problem	Solutions
Connected to network, but cannot play certain stations.	• The station may be offline at this hour, or operates in a different time zone. • Too many listeners are accessing the station; the server has reached its capacity limit. • The internet connection between your radio and the router is slow or unstable to sustain streaming. • The station link is outdated. Contact us to refresh the station list.
Radio freezes or stops responding.	Perform a forced restart: Press and hold the Power button for 5 seconds until the radio reboots (white screen appears), then release the button.
Radio screen stays black and does not respond to any button presses or charging attempts.	• Press and hold the Power button for 30 seconds, then release. • Press and hold the Power button again for 5 seconds until the screen turns on. The device should operate normally. • If the issue persists, check whether the battery requires charging.
Cannot connect to Wi-Fi network.	Confirm the Wi-Fi network has active internet access (test by browsing websites on a phone or computer on the same network).
Weak Wi-Fi signal strength.	Check the distance between the radio and router. Verify that a phone or computer can connect reliably at this location. If the signal is weak, reposition the router to improve coverage.


15

How to Add Custom Stations

Short press the Favorite key to open the favorites menu. Select Add Stations.

Follow the on-screen prompts to add stations to the device.

Important note: Stations saved via the Choyong web portal will appear under the My Favorite Stations menu. Manually added stations entered by URL will appear under the My Added Stations menu.

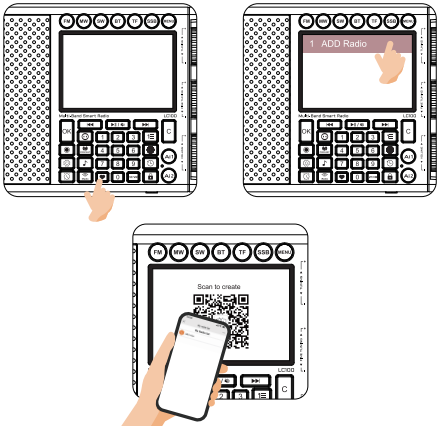

16

For more details and operation tips, please check the instruction videos on YouTube:

<https://www.youtube.com/@choyongradio>

For 24 - hour customer service, please contact:

choyongradio@gmail.com

Official Website

www.choyongradio.com



17

User Manual
Portable Multi-Band Internet Radio LC100

LC100 Button Function Description

Power Button

Long press to turn the radio on or off. When the device is unresponsive, long press for 5 seconds to restart the radio.

FM Button

Short press to enter FM reception mode. In FM reception mode, long press the FM button to activate the FM ATS (Auto Tuning and Storage) function.

1

MW Button

Short press to enter MW (Medium Wave) reception mode; short press again to enter LW (Long Wave) reception mode. In MW reception mode, long press the MW button to activate the MW ATS (Auto Tuning and Storage) function. In LW reception mode, long press the MW button to activate the LW ATS (Auto Tuning and Storage) function.

SW Button

Short press to enter SW (Shortwave) reception mode. In SW reception mode, long press the SW button to activate the SW ATS (Auto Tuning and Storage) function.

BT Button

Short press to enter Bluetooth reception mode. The device will work as a Bluetooth speaker.

TF Button

Short press to enter TF card playback mode.

SSB Button

Short press to enter SSB (Single Sideband) mode. In SSB mode, press the SSB key again to switch between USB and LSB.

2

MENU Button

Short press to bring up the menu categories. You can rotate the knob on the right to browse through the categories and select your desired program; short press the knob to confirm.Long press Key to Search Music.

OK Button (OK)

Short press to select the function displayed in the lower left corner of the screen.

Back Button (C)

Short press to return to the previous menu.

Ai 1 Button (Ai1)

Long press Key to Search Podcasts.

Ai 2 Button (Ai2)

Long press Key to Search Stations.

Previous Track / Rewind (⏮)

Short press to jump to the previous track; long press to rewind.

3

Next Track / Fast Forward (⏭)

Short press to jump to the next track; long press to fast forward.

Pause / Mute (⏸ / 🔇)

When playing online programs, short press to pause; when playing radio, short press to mute. Short press again to resume playback.

Ai Button (😊)

Long press to enter Ai mode. When the Mic icon starts flashing, say your question, and the device will reply with the answer.

Recording Button (📻)

Short press this button during playback to record the currently playing content. The recorded files are saved in the "Recording" folder on the TF card. In standby mode, press the record key to record ambient sound.

Settings Button (⚙)

Short press this button to enter the settings menu, where you can configure network settings, program settings, and other information.

4

Timer Button (🕒)

The timer menu includes four functions: Timer Power On, Timer Power Off, Alarm, and Playback Timer. You can configure them as needed.

Podcast Button (📻)

Short press to play podcasts randomly. To switch podcast content, press C key return to the previous menu to select your favourite podcasts.

Music Button (🎵)

Short press to play music station randomly. To switch music station, press C key return to the previous menu to select your favourite music stations.

Internet Radio Button (📶)

Short press this key to play local internet radio stations where the device is located.

Favorite Button (❤)

During program playback, short press this key to add it to your favorites; the heart icon will turn red. Short press again to remove it from favorites, and the red heart will turn white again.

5

Numeric Keys

When operating in FM/MW/SW/SSB mode, you may directly input a frequency for tuning.

For example: In SW mode, entering 11750 tunes to 11750 kHz; in FM mode, entering 97.5 tunes directly to 97.5 MHz.

VF/VM Key

Short press the VF/VM key to toggle between VF and VM mode.

VF Mode (View Frequency): Freely tune across the full frequency band, search for new stations, or directly input a frequency.

VM Mode (View Memory): Browse and recall stations previously saved in memory.

Network Button (🌐)

Short press the Network button to resume the last played online program.


Key Lock Button (🔒)

Short press this button to lock the keypad to prevent accidental presses; short press again to unlock.

6

History Button (🕒)

Short press this button to display your online program playback history. The playback history for FM/AM/BT and TF card will not be recorded.

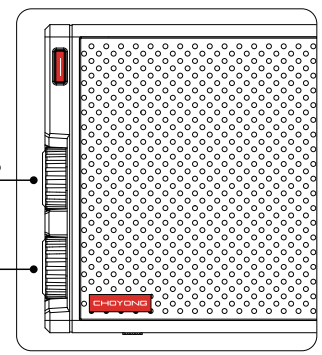

Treble Adjustment Knob

Bass Adjustment Knob


Treble Adjustment Knob

For treble adjustment. Adjustable range: -10 dB to 10 dB.

Bass Adjustment Knob

For bass adjustment. Adjustable range: -10 dB to 10 dB.

7

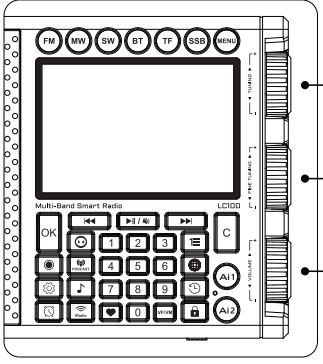

Tuning Knob

Fine Tuning Knob

Volume Knob

Tuning Knob

In standby mode, rotate the knob to quickly scroll through your preferred menus, and press the knob to confirm and enter the selected item.

When playing online programs, use the knob to skip to the previous or next track.

When listening to the radio in frequency display mode, rotate the knob to adjust the frequency. The step values are: FM 100 kHz, LW/MW 9 kHz, SW 5 kHz, and SSB 1 kHz.

Volume Knob

Rotate the knob to adjust volume.Turn fully counter-clockwise until you hear a click; the device will then enter sleep mode and stop all playback.Turn clockwise to power on, and playback resumes automatically.

If the device is in standby mode, short press the "Play/Pause" button to resume playback.

8

When playing online programs or TF card content, short press the knob to enter the next-level content menu, then rotate the knob to select the content you want to listen to.

When playing shortwave programs, press the knob to confirm and access the meter band selection.

Fine Tuning Knob

When playing online programs, use this knob to switch between program albums.

When listening to the radio in frequency display mode, use this knob to fine-tune the frequency. The step values are: FM 10 kHz, LW/MW 1 kHz, SW 1 kHz, and SSB 10Hz.

When playing shortwave programs, short press this knob to adjust the reception bandwidth.

9